



# How To Remove the "Speaker Buzzer"

## Step 1

Unscrew back panel off of controller  
(4) total screws

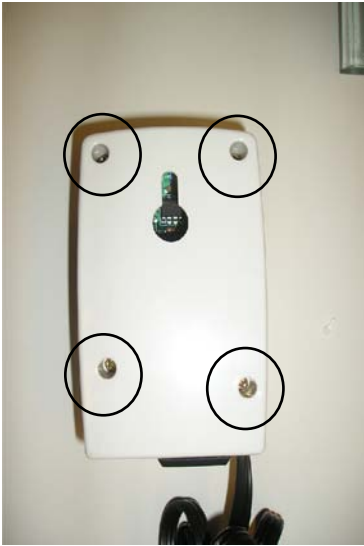

Speaker Buzzer is highlighted in yellow.

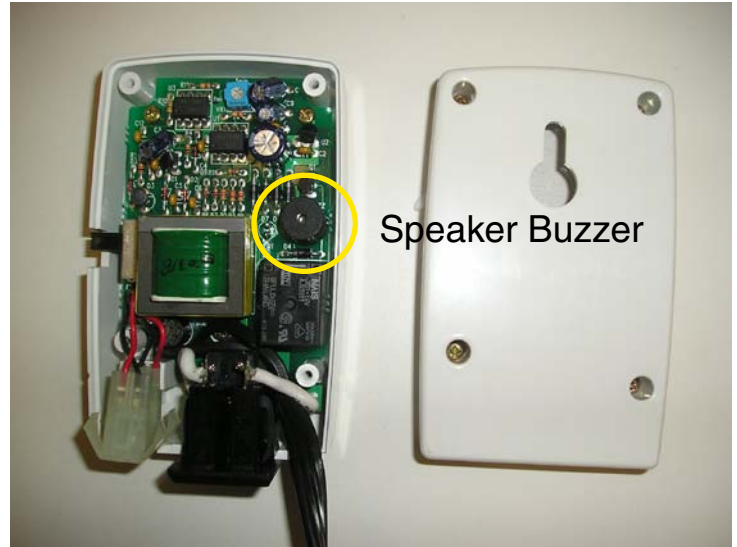

## Step 2

Gently push the Speaker Buzzer  
side to side until it detaches from circuit board

